


Gather your materials from this kit



TANK System

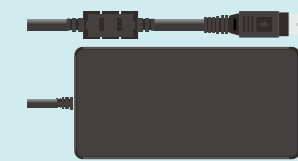

Power Adapter



Wi-Fi Antenna

You also need the following (not included in the kit):

- Monitor
- HDMI or DisplayPort cable
- Keyboard
- Mouse
- Ethernet cable (optional)




WHAT'S INCLUDED:



TANK System



Power Adapter

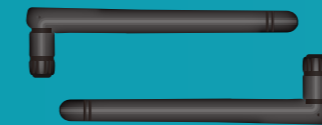

Wi-Fi Antenna

WHAT'S INSTALLED:

- Ubuntu 16.04 desktop long-term support (LTS)
- OpenVINO™ toolkit
- Intel® Media SDK
- Locate the Intel® System Studio license key on the TANK system and register at [//registrationcenter.intel.com](http://registrationcenter.intel.com)

LEARN MORE ABOUT THE KIT AND GET STARTED

<https://www.ieiworld.com/tank-aiot-development-kit/en>



<https://software.intel.com/iei-tank-dev-kit>



Copyright© 2018 IEI. All rights reserved. Specifications are subject to change without notice. Intel® and the Intel logo are trademarks of Intel® Corporation or its subsidiaries in the U.S. and/or other countries. Other brands and product names are trademarks or registered trademarks of their respective holder.

TANK

ACCELERATE TO THE FUTURE

IEI TANK AIoT Developer Kit Quick Start Guide



1 Connect your system using Ethernet or Wi-Fi

The TANK system is equipped with Ethernet and Wi-Fi capabilities.



Connect using Ethernet

Plug the Ethernet cable into your system, and then plug the other end of the cable into the router.

OR



Connect using Wi-Fi

To install the Wi-Fi antenna, screw each antenna onto the gold knobs on the back of the TANK system. To begin using the internet, connect to your wireless network and select the desired SSID.

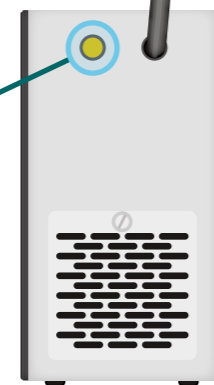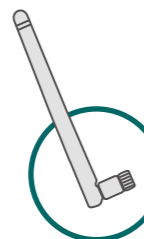


2 Connect the HDMI or DisplayPort devices

Plug in the HDMI or DisplayPort connector in the right direction as shown below.

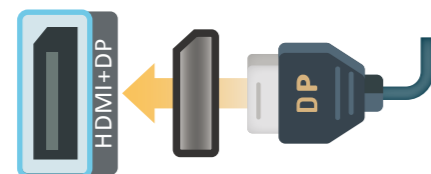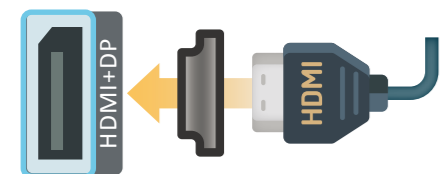


3 Plug in all cords

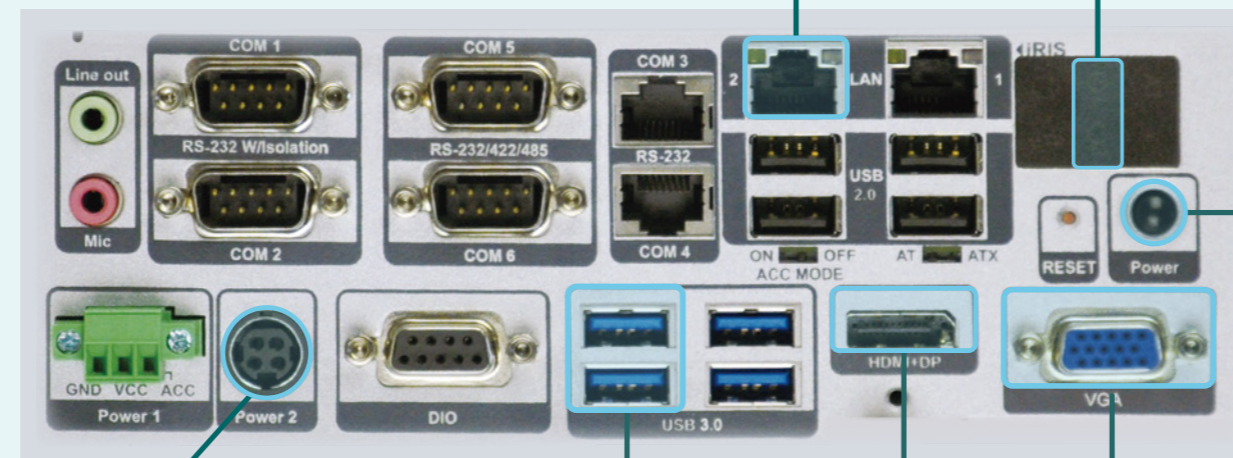

Power Supply



Keyboard

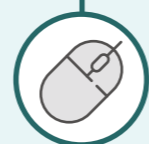

Mouse





VGA

or



HDMI and DisplayPort

4 Turn on

Press and hold the power button for three seconds or until the LED light turns from **orange**  to **blue** 



Turn on

5 Log in

Log in with the default user name and password.

Username:

Password:

6 Continue here:

<https://software.intel.com/get-started-with-ie-i-tank-dev-kit>

