

Intel Unite® Cloud Service

Quick Setup Guide

Revision 1.1

Legal Disclaimers and Copyrights

All information provided here is subject to change without notice. Contact your Intel representative to obtain the latest Intel product specifications and roadmaps.

Intel technologies' features and benefits depend on system configuration and may require enabled hardware, software or service activation. Performance varies depending on system configuration. No computer system can be absolutely secure. Check with your system manufacturer or retailer or learn more at intel.com.

You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein.

No license (express or implied, by estoppel or otherwise) to any intellectual property rights is granted by this document.

The products described may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Intel disclaims all express and implied warranties, including without limitation, the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, as well as any warranty arising from course of performance, course of dealing, or usage in trade.

Intel does not control or audit third-party benchmark data or the web sites referenced in this document. You should visit the referenced web site and confirm whether referenced data are accurate.

Intel, the Intel logo, and Intel Unite are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries.

*Other names and brands may be claimed as the property of others.

© 2019 Intel Corporation. All rights reserved.

Intel Unite® Cloud Service Quick Setup Guide

Revision History

Revision Number	Release Date	Description
1.0	April 2019	Initial Release
1.1	May 2019	Rearrange content for larger screenshots Updated link to Intel Unite® Cloud Service URL Updated logo in the upper right corner Changed all Intel Unite® cloud service to Intel Unite® Cloud Service Add subscription feature

Quick Setup for Intel Unite® Cloud Service Using the Setup Wizard

Refer to the Intel Unite® Cloud Service Deployment Guide for comprehensive setup instructions. Following are the quick setup instructions.

1. From a laptop that is connected to the Internet, open a browser (Intel recommends using Chrome®, Microsoft® Internet Explorer, or Safari®), and navigate to <https://www.intel.com/content/www/us/en/architecture-and-technology/unite/cloud-collaboration.html>.
2. Open the Sign-in page by clicking **Sign in** located in the upper-right corner of the page.
3. If you already have an Intel account, use that account to sign in. Otherwise, follow the steps below to create an Intel account:
 - a. From the Sign-in page, click **Create your account** on the right side of the page.
 - b. On the program registration page, enter the requested information and click the **Submit** button at the bottom of the page.
 - c. Check your email for the verification email and follow the instructions in it to complete the account creation process.
4. After signing in, the Organization page will be displayed and the setup wizard will start automatically.
5. Enter a name and a description for the organization. Refer to **Figure 1**.
6. Click **Next** to continue to the next step of the setup wizard.
7. Click **SHOP SUBSCRIPTIONS** to obtain a subscription. Refer to **Figure 2**. After obtaining a new subscription, the subscription will automatically be activated for the organization.
8. Once the setup wizard display refreshes to show the activated subscription, refer to **Figure 3**, click **Next** to continue to the next step of the setup wizard. **Note:** It can take up to 15 minutes for the display to refresh showing the activated subscription.
9. Enter the email address of the user that will be managing the use of the Intel Unite® Cloud Service. Refer to **Figure 4**.
10. Select the privacy policy to apply to this organization.
11. Click **Next** to continue to the next step of the setup wizard.
12. Take the laptop and place it next to a mini form factor device with Intel® vPro™ technology that will be used as the hub. A large display is connected to the hub to display presentations during a meeting using the Intel® Unite Cloud Service. Refer to **Figure 5**.
 - a. Confirm that the hub is connected to the Internet.
 - b. Apply the instructions from the **PAIR HUBS** step of the wizard to the hub device.

Note: Windows firewall must be configured on the hub to allow the Intel Unite® application access to the network. Refer to the Intel® Unite Cloud Service deployment guide for details.

 - c. After entering the pairing code and clicking **PAIR HUB**, confirm that the hub display shows the instructions for connecting to it.
 - d. If paring more than one hub, repeat these steps for each hub.

Figure 1. Create Organization

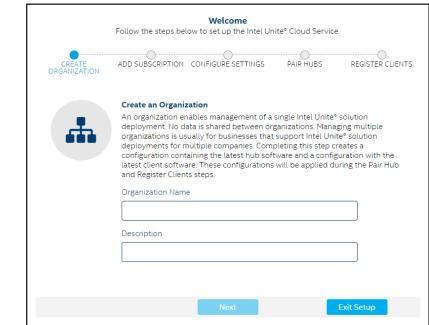


Figure 2. Add Subscriptions



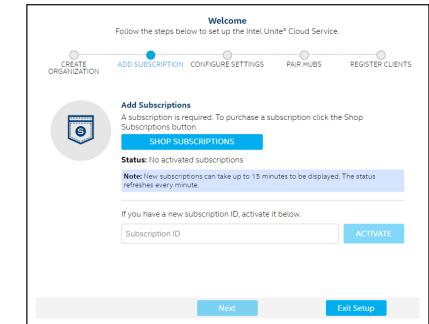


Figure 3. Activated Subscriptions

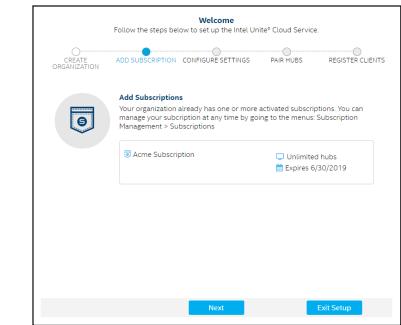

13. Click **Next** to continue to the next step of the setup wizard.
14. Take the laptop and place it next to a device that will be a client. A client is a device used by a user to connect to a meeting hosted by a hub using the Intel Unite® Cloud Service. Refer to **Figure 6**.
 - a. Confirm that the client is connected to the Internet and can access the hub device.
 - b. Apply the instructions from the **REGISTER CLIENTS** step of the wizard to the client device.
 - c. After clicking the verification link in the email, confirm that the client device displays the Settings page of the Intel Unite® client application.
 - d. On the client, click the **X** in the upper right corner to close the Settings page.
 - e. Upon closing the Settings page, the client will display a PIN entry screen.
 - f. If registering more than one client, repeat these steps for each client device.
15. In the setup wizard, click **Exit Setup** to complete the wizard.
16. Setup is now complete; click **Close** to exit the setup wizard. Refer to **Figure 7**.

Figure 7. Setup Complete

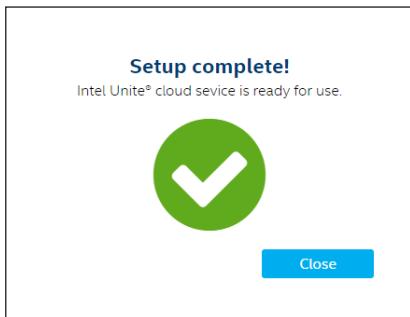

17. To connect to the hub from a client, enter the PIN number displayed in the upper right corner of the hub display into the login screen of a client.
18. Refer to the Intel Unite® Cloud Service User Guide for usage of the client application.

Figure 4. Configure Settings

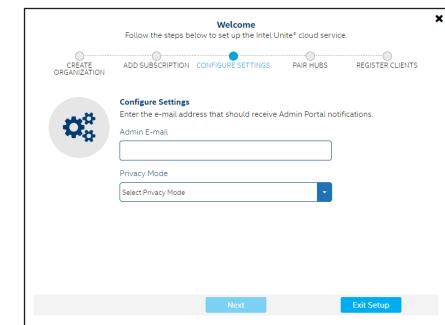


Figure 5. Pair Hubs

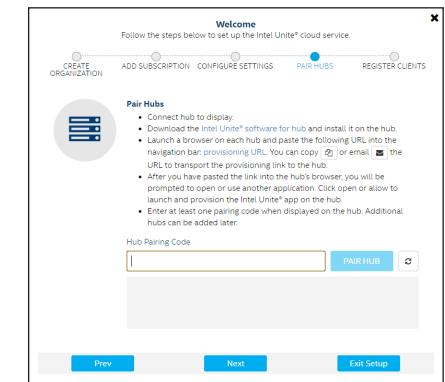


Figure 6. Register Clients

