

Intel Unite[®] Plugin for Logitech GROUP* and Logitech CONNECT* Devices

INSTALLATION AND USER GUIDE

November 2017



You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein.

No license (express or implied, by estoppel or otherwise) to any intellectual property rights is granted by this document.

All information provided here is subject to change without notice. Contact your Intel representative to obtain the latest Intel product specifications and roadmaps.

The products described may contain design defects or errors known as errata, which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Copies of documents, which have an order number and are referenced in this document, may be obtained by calling 1-800-548-4725 or by visiting: <http://www.intel.com/design/literature.htm>

Intel technologies' features and benefits depend on system configuration and may require enabled hardware, software or service activation. Learn more at <http://www.intel.com/> or from the OEM or retailer.

Intel, the Intel logo, and Intel Unite are trademarks of Intel Corporation or its subsidiaries in the United States and/or other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 2017, Intel Corporation. All rights reserved.



Contents

1	Introduction.....	4
1.1	Audience	4
2	Intel Unite® Plugin Requirements	5
2.1	Software Requirements	5
2.2	Hardware Requirements	5
3	Intel Unite® Plugin for Logitech GROUP* Devices Installation	6
3.1	Logitech GROUP Device Controls	6
3.2	Logitech GROUP Installation — Prerequisites	7
3.3	Logitech GROUP Device Hardware Setup and Installation.....	7
3.3.1	Intel Unite® Hub Setup for Logitech GROUP Device	7
3.3.2	Installing the Intel Unite® Plugin for Logitech GROUP Devices.....	8
4	Using the Logitech GROUP	11
5	Intel Unite® Plugin for Logitech CONNECT* Device Installation	13
5.1	Logitech CONNECT Device Controls	13
5.2	Logitech CONNECT Installation Prerequisites	14
5.3	Logitech CONNECT Device Hardware Installation and Setup.....	14
5.3.1	Intel Unite® Hub Setup for Logitech CONNECT Device	14
5.4	Installing the Intel Unite® Plugin for Logitech CONNECT	15
6	Using the Logitech CONNECT	17



1 Introduction

Welcome to the Intel Unite® Plugin Guide for Logitech* GROUP* and CONNECT* devices. This document highlights the basic but necessary steps to setup the plugin for a production environment.

1.1 Audience

This document is designed for use by IT professionals operating within a corporate environment.



2 Intel Unite® Plugin Requirements

2.1 Software Requirements

The following software is required for the installation and use of the Intel Unite® plugin for Logitech* GROUP* and CONNECT* devices.

- Intel Unite® Hub software version 3.1
- Intel Unite® Plugin for Logitech* version 1.0

2.2 Hardware Requirements

This document covers the Logitech plugin that is used with two different Logitech products, the Logitech GROUP Kit and the Logitech CONNECT device. Because the behavior of the two devices is different, follow the installation for the device you are using.

3 Intel Unite® Plugin for Logitech GROUP* Devices Installation

The Logitech GROUP* devices are shown in Figure 1 and Figure 2.

Figure 1. Logitech GROUP Camera



Figure 2. Logitech GROUP Speaker



3.1 Logitech GROUP Device Controls

- **Audio out:** +/- Mute
- **Microphone:** +/- Mute
- **Camera Controls:**
 - **Zoom +/-**
 - **Tilt and Pan**

Note: When the camera is set at 100% zoom out (Zoom -) the tilt and pan are disabled by the hardware. In this case, to unlock the tilt and pan use the zoom control in the plug in.

3.2 Logitech GROUP Installation — Prerequisites

- The Logitech GROUP system does not require any software or driver installation.
- The Intel Unite® plugin for Logitech requires that the Logitech device is configured as the system Default device for playback and recording devices.
- The Intel Unite® plugin for Logitech GROUP device is downloaded from the Plugin Repository.
- Install Intel Unite® Hub software in Enterprise mode.

3.3 Logitech GROUP Device Hardware Setup and Installation

To install the hardware, connect the Logitech GROUP device(s) to the Intel Unite® hub PC via USB per the vendor instructions.


3.3.1 Intel Unite® Hub Setup for Logitech GROUP Device

The Intel Unite® plugin for Logitech requires that the Logitech devices be configured as the system default devices for playback and recording devices.

To set the system defaults:


1. Right click the **Speaker** icon in the system tray.
2. Select **Playback Devices**.
 - a. Select **Logi GROUP Speakerphone** from the list of Output devices (Figure 3).

 Figure 3. Playback Devices Sample



- b. Right-click and select **Set as Default Device**.
3. Select the **Recording Tab**.
 - a. Select **Logi GROUP Speakerphone** from the list of output devices (Figure 4).

 Figure 4. Recording Devices Sample



- b. Right-click and select **Set as Default Device**.


3.3.2 Installing the Intel Unite® Plugin for Logitech GROUP Devices

On the Intel Unite® Hub PC, install the **Intel Unite®** plugin for Logitech GROUP devices

1. Open the **Plugin MSI** file.

The **Setup Window** opens as shown in [Figure 5](#).

 
Figure 5. Setup Window

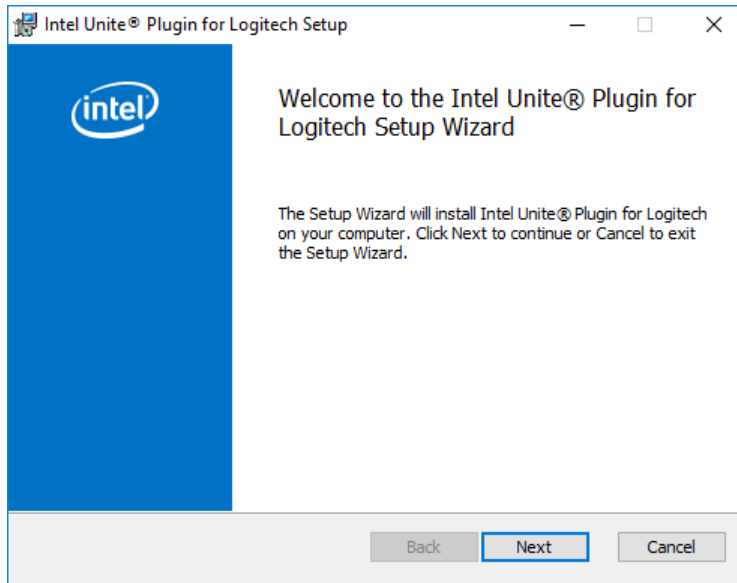

2. Select **Next** ([Figure 5](#)).

The **End User License Agreement** window opens as shown in [Figure 6](#).

 
Figure 6. License Agreement Window

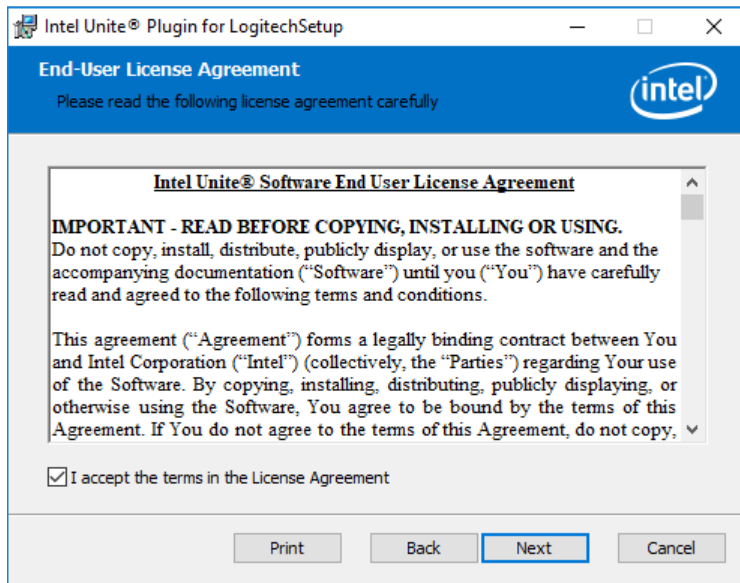

3. Accept the terms in the **License Agreement** (Figure 6).
4. Select **Next** (Figure 6).

The **Ready to install** window opens as shown in Figure 7.

 
Figure 7. Install Window

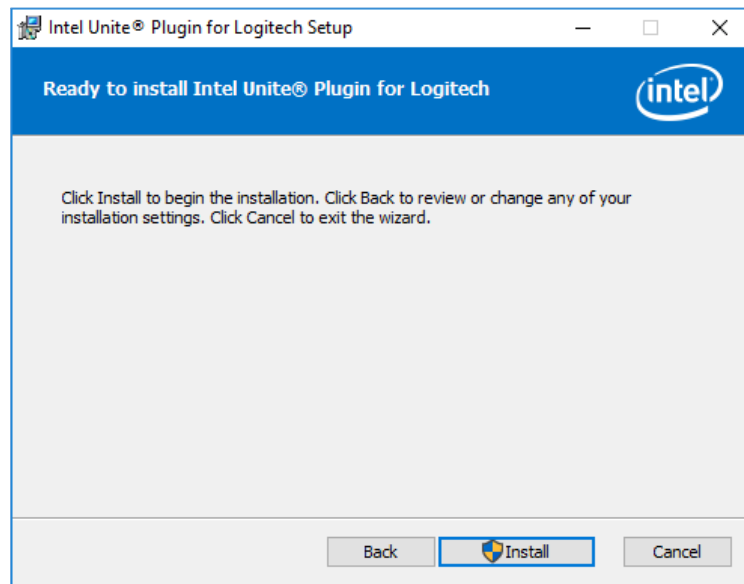

5. Select **Install** (Figure 7).

The **Completed Install** window opens as shown in Figure 8.

 Figure 8. Completed Install Window

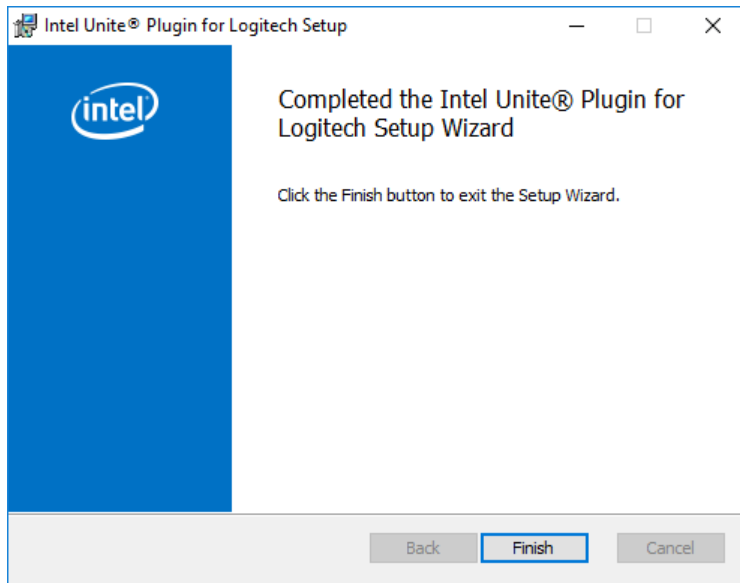

6. Select **Finish** (Figure 8)


4 Using the Logitech GROUP

After the plugin is installed on the Intel Unite® hub PC, the plugin is automatically available to any Intel Unite® client that makes a connection to the hub.

After the connection is made, the **Logitech GROUP Plugin** icon is visible at the bottom of the **Intel Unite®** client management window (Figure 9).

To launch the plugin, select the **Logitech GROUP Plugin** icon located at the bottom of the window (Figure 9).

 Figure 9. Intel Unite® Client Management Window

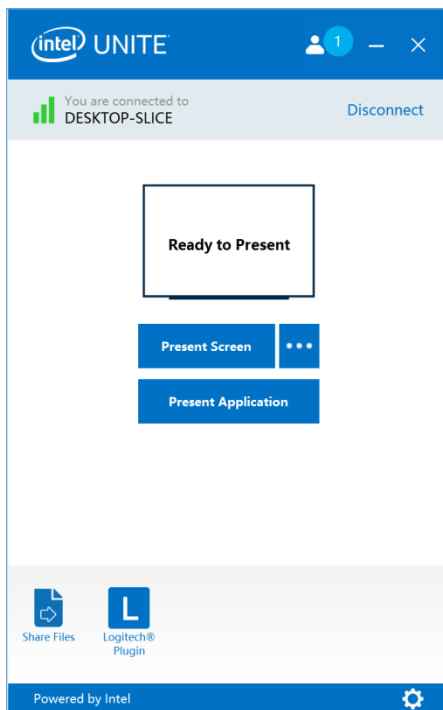


After the plugin is launched, the **Logitech GROUP Device Controls** window opens (Figure 10).

Logitech GROUP Device Controls

The Logitech GROUP camera automatically sleeps when not in use; therefore, whenever a user issues camera controls, the camera must be streaming video for the controls to work reliably.

- **Move Up, Move Down, Move Left, and Move Right.**
Movement controls by the plugin are reflected by physical camera movements and are shown on the video stream.
- **Zoom In and Zoom Out:** Control allows the camera to zoom in and out.
- **Volume Up and Volume Down:** Controls the Logitech GROUP speaker if it is designated as the system default speaker.
- **Speaker State Icon** – Shows the state of the speaker.
- **Microphone State Icon** - Shows the state of the microphone.

 Figure 10. Intel Unite® Client Plugin Management — Logitech GROUP Device Controls

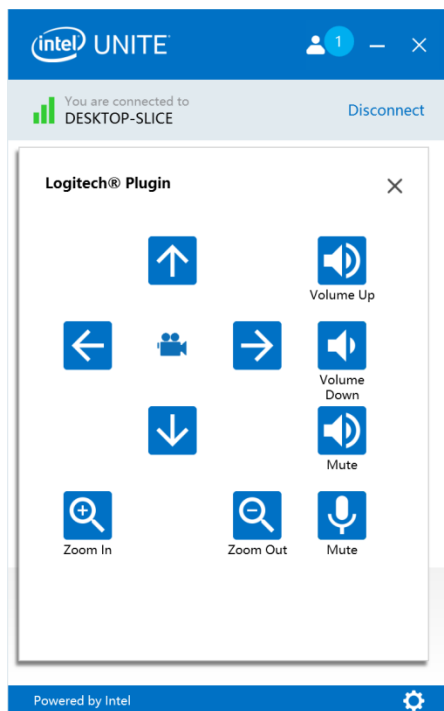

5 Intel Unite® Plugin for Logitech CONNECT* Device Installation

5.1 Logitech CONNECT Device Controls

- **Audio out:** +/- Mute
- **Microphone:** +/- Mute
- **Camera Controls:**
 - **Zoom +/-**
 - **Tilt and Pan**

Note: Tilt and Pan has three available positions (Hardware limitation).

Note: When the camera is in a 100% zoom-out configuration, the tilt and pan are disabled by the hardware. To unlock the tilt and pan functions of the device, use the zoom control within the plugin and then zoom in one-step.

Figure 11. Logitech CONNECT*



5.2 Logitech CONNECT Installation Prerequisites

- The Logitech CONNECT* device does not require software or driver installation.
- The Intel Unite® plugin for Logitech requires that the Logitech GROUP or CONNECT device is configured as the system Default device for playback and recording devices.
- The Intel Unite® plugin for the Logitech CONNECT device is downloaded from the Plugin Repository.
- Install Intel Unite® hub software in Enterprise mode.

5.3 Logitech CONNECT Device Hardware Installation and Setup


To install the hardware, connect the Logitech GROUP device(s) to the Intel Unite® hub PC via USB according to vendor instructions.

5.3.1 Intel Unite® Hub Setup for Logitech CONNECT Device

The Intel Unite® plugin for Logitech requires that the Logitech devices be configured as the system default devices for playback and recording devices.


1. Right-click the speaker icon in the system tray.
2. Select **Playback Devices**
 - a. Select **ConferenceCam CONNECT** from the list of output devices (Figure 12).

 Figure 12. Playback Devices Sample



- b. Right-click and select **Set as Default Device**.
3. Select the **Recording Tab**.
 - a. Select **ConferenceCam CONNECT** from the list of output devices (Figure 13).

 Figure 13. Recording Devices Sample



- b. Right-click and select **Set as Default Device**.


5.4 Installing the Intel Unite® Plugin for Logitech CONNECT

On the Intel Unite® Hub PC, install the Intel Unite® plugin for Logitech CONNECT devices using the following steps.

1. Open the **Plugin MSI** file.

The **Setup Window** opens as shown in [Figure 14](#).

 
Figure 14. Setup Window

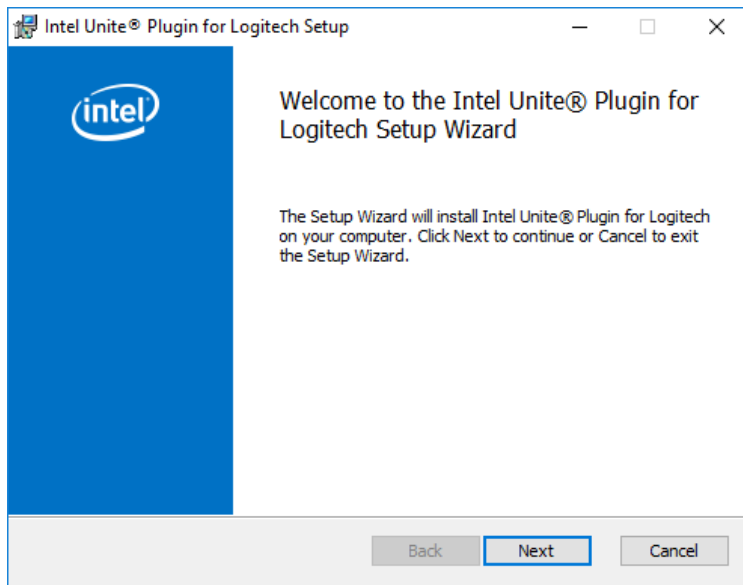

2. Select **Next** ([Figure 14](#)).


The **End User License Agreement** window opens as shown in [Figure 15](#).

 Figure 15. License Agreement Window

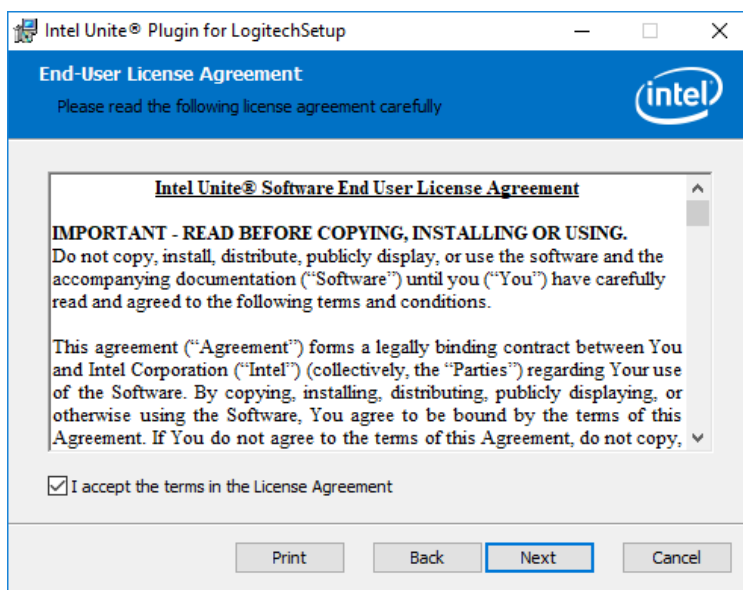


3. Accept the terms in the **License Agreement** (Figure 15).
4. Select **Next** (Figure 15).
The **Ready to install** window opens as shown in Figure 16.

 Figure 16. Install Window

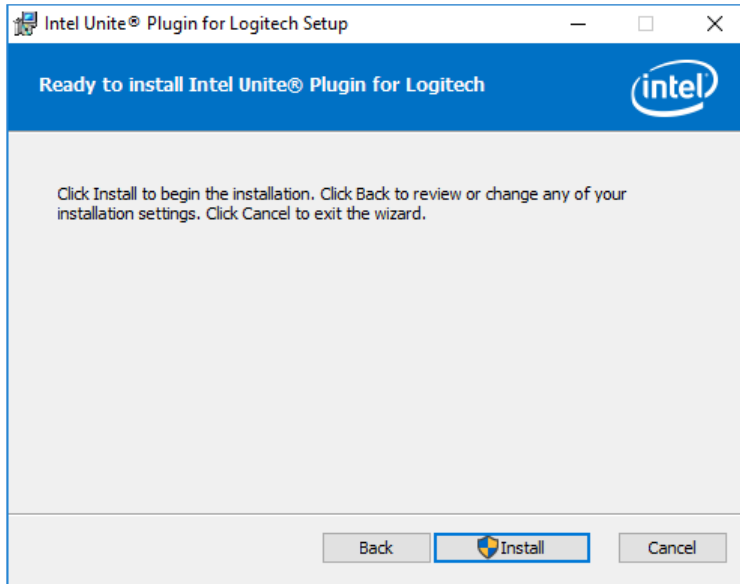

5. Select **Install** (Figure 16).
The **Completed Install** window opens as shown in Figure 17.

 Figure 17. Completed Install Window

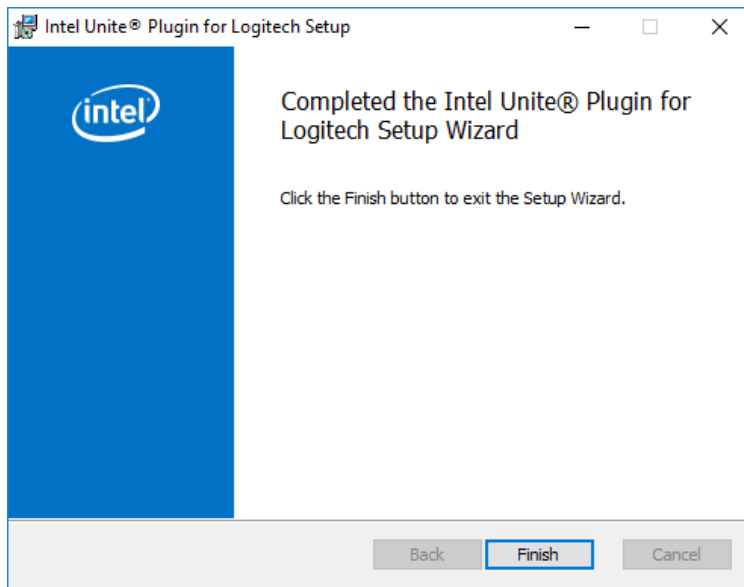

6. Select **Finish** (Figure 17).


6 Using the Logitech CONNECT

After the plugin is installed on the Intel Unite® hub PC, the plugin is automatically available to any Intel Unite® client that makes a connection to the Unite hub.

After the connection has been made, the **Logitech Plugin** icon is visible at the bottom of the **Intel Unite® Client Management** window (Figure 18).


To launch the plugin, select the **Logitech Plugin** icon located at the bottom of the window (Figure 18).

 Figure 18. Intel Unite® Client Management

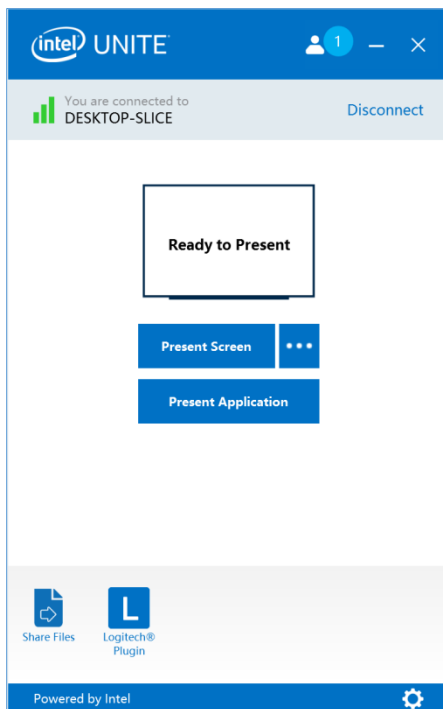

After the Plugin is launched, the **Logitech CONNECT Device Controls** window opens (Figure 19).

 Figure 19. Intel Unite® Client Plugin Management — Logitech CONNECT Device Controls

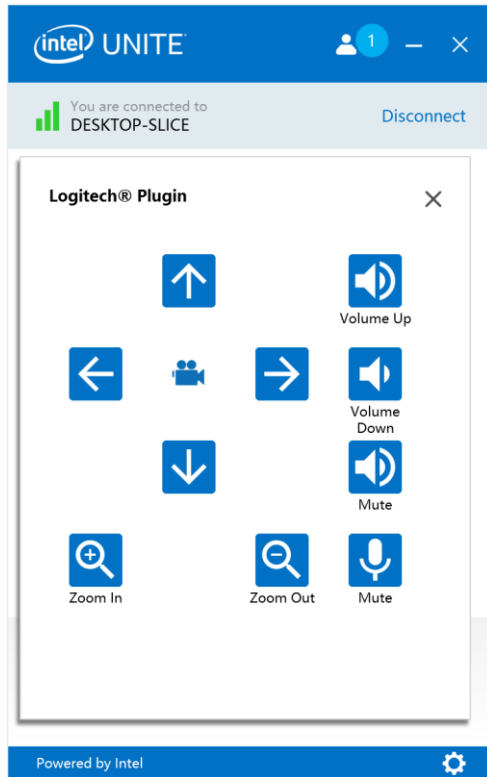

Logitech CONNECT Device Controls

The Logitech CONNECT camera automatically sleeps when not in use. Therefore, whenever a user issues camera controls, the camera must be streaming video for the controls to work reliably.

- **Move Up, Move Down, Move Left, and Move Right:** Movement controls by the plugin are reflected by physical camera movements and are shown on the video stream.
- **Zoom In and Zoom Out:** Control allows the camera to zoom in and out.
- **Volume Up and Volume Down:** Controls the Logitech GROUP speaker only if it is designated as the system default speaker.
- **Speaker** state icon: Shows the state of the speaker.
- **Microphone** state icon: Shows the state of the microphone.